

J2FAB External Regulator Installation Instructions

- **Green** wire to terminal I
- **Red** wire to terminal A
- **Yellow** wire to terminal S
- **Blue** wire to terminal F
- **Black** wire to terminal B-

Refer to side of external regulator for terminal positioning.

To adjust voltage set-point, use a flathead screwdriver to turn the potentiometer to the desired setting. Do not start with potentiometer maxed out.

Failure to follow instructions may result in damage not covered under warranty.